ergoArc™

CK-T1B Ergonomic Keyboard

User Manual

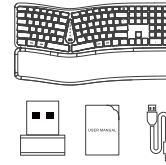## Thank you for choosing our CK-T1B Ergonomic Wireless Keyboard

Please take a moment to read this user manual thoroughly, and keep it for future reference. This manual explains the features and functions of this product.
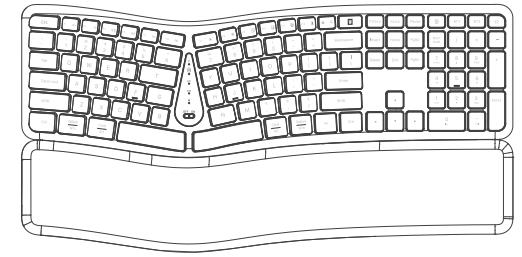
Specifications

Model :	CK-T1B
Type :	Ergonomic wireless bluetooth keyboaard
Connection Method :	2.4G and bluetooth
Receiver :	USB receiver
Size :	455.7 x 229.8 x 51.2 mm
Layout :	US
Colour :	Black and gray
Number of Keys :	111 keys
Material :	ABS plastic
Battery :	300 mAh lithium battery
Charging Cable :	Type-C
Waterproof	Yes
Automatic Energy-saving mode :	Yes
Compatibility :	Windows, macOS, Linux, Chrom OS, iOS, Android

What's in the box ?

▷ CK-T1B Ergonomic Keyboard　x 1 pcs
▷ USB Receiver　　　　　　　　x 1 pcs
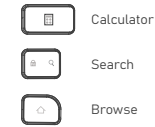▷ User Manual　　　　　　　　 x 1 pcs
▷ Charging Cable (Type-C)　　 x 1 pcs

Production Description

Multimedia function description

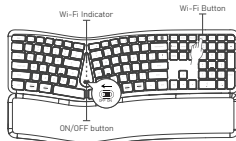|		
F1 = Mute	F5 = Play / Pause	F9 = Select All
F2 = Volume –	F6 = Next track	F10 = Copy
F3 = Volume +	F7 = Screen brightness +	F11 = Paste
F4 = Previous track	F8 = Screen brightness –	F12 = Cut

Calculator

Search

Browse

Connect the CK-T1B keyboard

Step 1: Turn on the ON/OFF button to the 'ON' position on the keyboard.

Step 2: Click the Wi-Fi button on the upper right corner of the keyboard to ensure that the position indicator of the Wi-Fi indicator light is flashing white.

Step 3: Remove the USB receiver from the bottom of the keyboard and insert it into your device. Wait for 1–3 sec to connect successfully.

Bluetooth Connection Method

Step 1: Press the BT 1 or BT 2 button on the upper right corner of the keyboard to ensure that the indicator light is flashing at the BT 1 or BT 2 button indicator light position, then press and hold the BT 1 or BT 2 button for 3–5 seconds. When the bluetooth indicator light flashes rapidly, it indicates that the bluetooth is turned ON.

Step 2: Turn ON the bluetooth of your PC/ Laptop, search for the bluetooth name 'CK-T1B 3.0' or 'CK-T1B 5.0' in your device, and click pair to complete the connection.

Note: Windows 7, 8, and 8.1 support CK-T1B 3.0, while Windows 10 (version 1803 and later) and Windows 11 support CK-T1B 5.0. To benefit from the features of Bluetooth 3.0 or 5.0, ensure your system's Bluetooth drivers and hardware are up-to-date.

Before First Use

1. Before using the CK-T1B keyboard, be sure to carefully review the keyboard user manual and operate according to the requirement and specifications in the manual.

2. When cleaning the CK-T1B keyboard, do not rinse it directly with water, as it many result in the keyboard being scrapped.

3. The CK-T1B keyboard should be kept as dry as possible.

Cleaning and Maintenance

1. Disconnect CK-T1B keyboard power: Turn off the computer and disconnect the keyboard power to prevent any accidents.

2. Flip the CK-T1B keyboard upside down: Gently tap the back to prevent dust and debris from falling off.

3. Blow with an air cylinder: Use a compressed air cylinder to spray the airflow into the gaps of the keyboard to remove dust and debris. Be careful not to overuse air pressure to avoid damaging the internal components of the keyboard.

4. Use a vacuum cleaner: Use a small-sized vacuum cleaner equipped with a slender suction nozzle to gently remove dust and debris from the keyboard.

5. Brush cleaning: Use a soft bristled brush or keyboard cleaning brush to gently wipe the gaps between the keyboard surface and key positions to remove dirt and dust.

6. Use cleaning liquid: Spray an appropriate amount of keyboard cleaning liquid onto a cleaning cloth, and then gently wipe the surface and key positions of the keyboard with a damp cloth. Be careful not to excessively wet the keyboard to prevent liquid from seeping into its interior.

7. Disinfection treatment: Use disinfectant wipes or sprays to gently wipe the keyboard surface to kill bacteria and viruses.

8. Regular cleaning: Regularly clean the keyboard to maintain its cleanliness and hygiene. Thorough cleaning can be done every month or every few months.

Notes

▷ Before cleaning the keyboard, make sure to disconnect the power and unplug the keyboard cable.

▷ Avoid using too much water or cleaning liquids to avoid damaging the keyboard.

▷ Do not pour cleaning liquid into the keyboard.

▷ When cleaning the keyboard, be careful to avoid damaging the internal components of the keyboard.

▷ If the keyboard is severely dirty or damaged, it is best to seek professional advice or seek professional cleaning services.

If you encounter issues with your keyboard, experience connectivity problems, or require assistance, please do not hesitate to reach out to our customer support team for expert guidance and support.

Email: support@ergoarc.com